



VX Series Salt Chlorinator S Model

OPERATING INSTRUCTIONS



HURLCON Manufacturing & sales Pty. Limited. A.B.N. 97 007 284 504

www.hurlcon.com.au service@hurlcon.com.au

Information and specifications subject to change without notice.

Melbourne:	Sydney:	Brisbane:	Gold Coast	Adelaide:	Perth:
Ph: (03) 9765 9700	Ph: (02) 9853 2100	Ph: (07) 3308 5400	Ph: (07) 5552 2600	Ph: (08) 8349 2500	Ph: (08) 9350 2600
Fax: (03) 9765 9770	Fax: (02) 9853 2170	Fax: (07) 3309 5470	Fax: (07) 5552 2670	Fax: (08) 8349 2500	Fax: (08) 9350 2670

INDEX

1.0 General Overview	3
2.0 User Panel	3
2.1 Chlorine Output and Boost	4
2.2 User Mode.....	4
2.3 Warnings Display.....	5
2.4 Chlorine output level	5
3.0 General Operation/Pool Chemistry	6
3.1 Setting the right Chlorine Output and Filtration Time.....	6
3.2 Stabiliser.	6
3.3 pH Level.....	6
3.4 Total Alkalinity.....	6
3.5 Salt Level.	6
4.0 Chlorinator Maintenance and Troubleshooting	7
4.1 Cell Maintenance.	7
4.2 Troubleshooting.	8
5.0 Warranty	8

1.0 General Overview

Congratulations! You have purchased a Hurlcon VX series Chlorinator. Please read the instructions carefully and your purchase will provide you with years of trouble free use.

Your Hurlcon VX Chlorinator works by converting some of the salt in your pool into chlorine which starts to destroy algae, bacteria and viruses in your pool water thereby sanitising your pool. As part of the process, the chlorine is converted back into salt and hence salt is not consumed.

Your VX Chlorinator control has many features to ensure simple operation of your chlorinator and filtration system. It has a clever Spa mode to ensure that the right level of chlorine is produced whilst you are enjoying a spa.


Note: The Chlorinator is not intended for use by young children or infirm persons without supervision. Please ensure that young children are supervised to ensure that they do not play with the Chlorinator.

2.0 User Panel

The user panel can be broken down into 4 separate areas :

1. **Display Area**
2. **Chlorine Output Controls** for setting the chlorine output level and to activate the Superchlorinate feature
3. **Warnings display** to indicate that there is no flow to the cell or there is insufficient salt in the pool
4. **User Mode** for manual control of the pump/Chlorinator or to select Spa mode.
5. **Chlorine Production Level** indicates the amount of chlorine being produced.


Once programmed, you will generally only use the User Mode and Chlorine Output control.

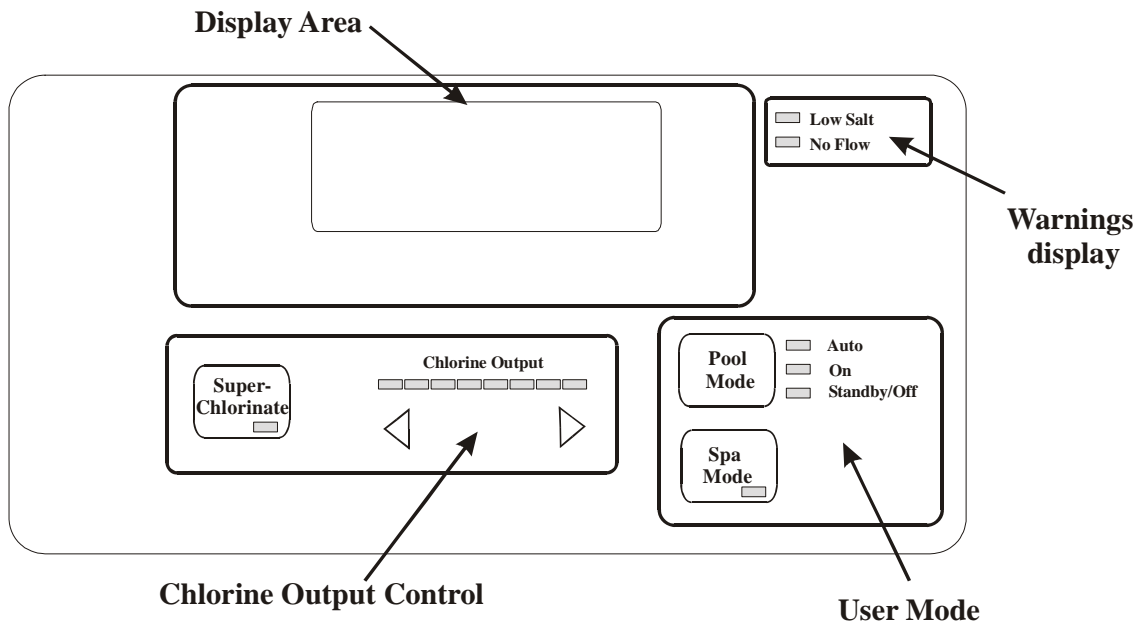

2.1 Chlorine Output and Super Chlorinate

The Chlorine Output Control area of the user panel has three main functions:

- Increase/Decrease arrows for setting the chlorine output level of the chlorinator. The chlorinator output can be set from levels 1 through to 8. This level only applies to Pool Mode. When the Chlorinator is in Spa mode, the chlorine output will be at level 1
- Chlorine Output display shows the level set
- Super Chlorinate button turns On/Off Superchlorinate. When On, the Chlorinator/pump will run for 24 hours on maximum output so as to kill bugs that have become immune to normal levels of chlorine.

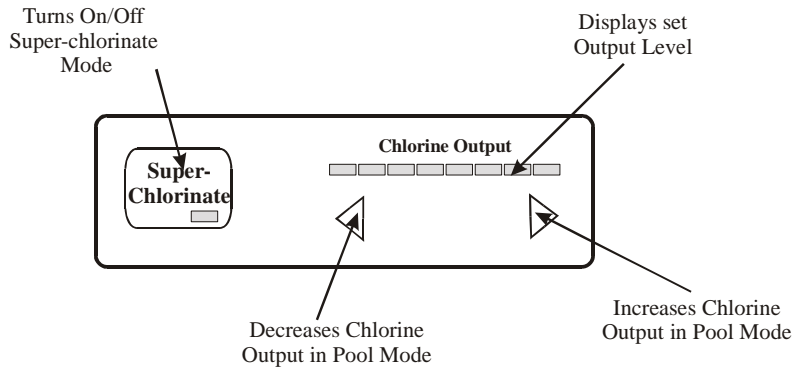


2.2 User Mode

The user mode buttons enable you to select Pool or Spa mode and to manually control the Chlorinator/Pump. Functions are as follows:

- POOL MODE:** Sends a message to other Hurlcon equipment (if fitted) to go to Pool mode.

Auto	Not Used
On	The Chlorinator/Pump will run continuously.
Standby/Off	The Chlorinator/Pump will turn off.

- SPA MODE:** Sends a message to other Hurlcon equipment (if fitted) to go to Spa mode and turns the pump on

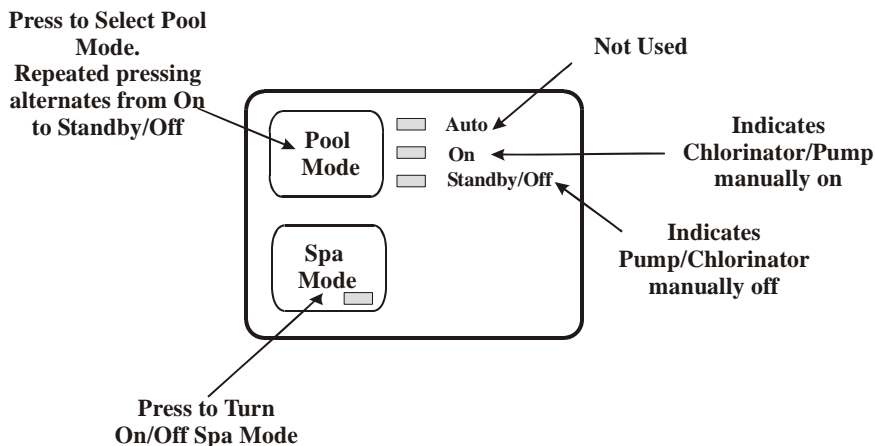

2.3 Warnings Display

Apart from messages displayed on the User display, there are two warning indicators.


- (a) **LOW SALT:** This indicates that the concentration of salt has reduced within you pool. To rectify, add salt at approx. 50kg per 50000 litres of water (see 3.5 Salt level below)
- (b) **NO FLOW:** This indicates that the Chlorinator thinks that there is no flow to the cells. Potential problems/solutions are described in the Diagnostics section.

2.4 Chlorine Output Level

The LED lights on the user panel set the desired output level or chlorine level.

As shown below, the bottom right hand corner of the LCD display indicates the actual level as distinct from the set or desired output indicated by the LED lights.

The chlorinator output, or chlorine production, will be affected by water temperature, salt levels and the input voltage of the chlorinator. When the chlorinator is operating at maximum efficiency, the Chlorine Output level should always be approximately the same level as the Set Point. The set point can be checked on the LED display which is divided into 8 sections. If all 8 LED's are illuminated, out set point is at 8. If only 6 light are illuminated, the set point is 6

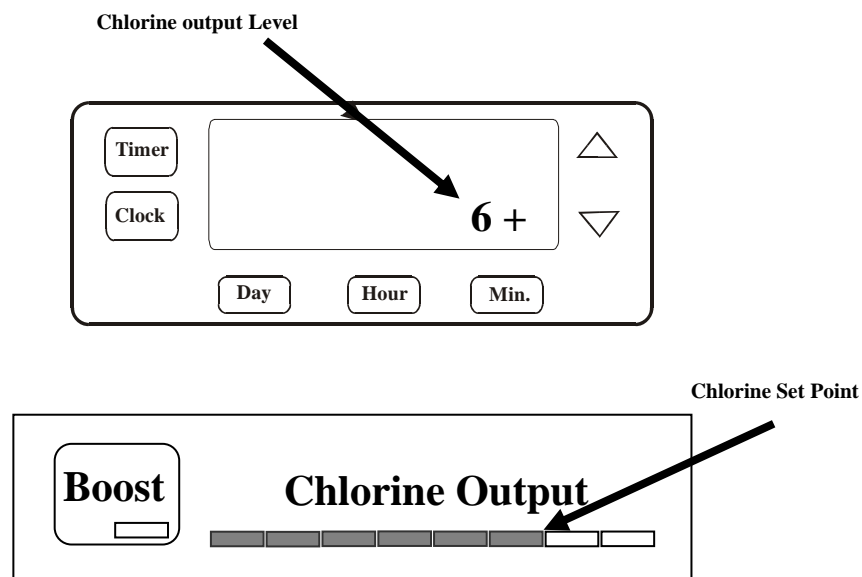

Your VX Salt chlorinator will always attempt to adjust the output so that the actual output level matches set point level. At times when the Chlorine output level is lower than the set point, check the salt level in your swimming pool at your local pool shop. Alternatively, you may have a low voltage supply to the chlorinator (less than 240Volts) or the water may be colder than usual.

Maximum efficiency will be achieved from you chlorinator at the following levels

Water at 27° C
Voltage at 240V
Salt Level at 4000 PPM

Please see page 8 for the recommended method of Cell Cleaning.

3.0 General Operation/Pool Chemistry

3.1 Setting the Right Chlorine Output and Filtration Time

Your VX Chlorinator must be run every day to ensure that your pool is correctly sanitised. As the sun dissipates chlorine, running times are higher in the summer compared to the winter. Hurlcon recommend that you initially run your chlorinator at maximum output

Summer

You should set your Chlorinator to operate for 8 to 10 hours per day. Ideally, run it for 4-5 hours in the morning (say 8-12pm) and 4-5 hours in the evening (say 6.00-11pm).

In extremely hot weather it may be necessary to extend the running time if you find that the free chlorine level is too low.

Winter

You should set your Chlorinator to operate for 6 to 8 hours per day. Again, running it in the morning and evening is preferable.

Checking Chlorine Level.

Ideally, check your Chlorine level after the morning operating period. The free chlorine residual level should be somewhere between 1 and 3 part per million. Increase or decrease the output of the Chlorinator to get the right residual chlorine level. It may also be necessary to adjust the operating period if you are running at minimum or maximum output.

3.2 Stabiliser

As previously mentioned, sunlight rapidly dissipates the amount of free chlorine in your pool. Chlorine stabiliser greatly reduces this effect.

Without stabiliser, you may need to run your Chlorinator and filtration system up to 16 hours per day longer!!!

Keep the Stabiliser reading between 30 and 60ppm.

3.3 pH Level

You should keep your pH level between 7.0 and 7.4 for fibreglass pools and 7.2 to 7.6 for other pools.

3.4 Total Alkalinity

The ideal range is between 80 and 120 ppm.

3.5 Salt Level

Although salt is not consumed by the Chlorinator, salt is lost during backwashing and when your pool overflows due to rain or splashing. The correct salt level is important to cell life and the effective operation of your Chlorinator. Salt level should be maintained around 4,000ppm but should never be allowed to fall below 3000ppm.

A typical pool of around 50,000 litres requires 200kg of salt to initially set-up the pool to 4,000ppm.

A low salt level warning is indicated on your VX Chlorinator if the salt level drops. If Low Salt is indicated, check again in 24 hours and then if it is still indicated, add two 25kg bags of salt to the

shallow end of your pool. Run the filtration system for approx. 6 hours to help mix the salt in the pool. It can take up to a day for the salt to fully dissolve.

If the low salt light is still on, then you should get your pool water tested. If the Salinity is above 4000ppm then you may need to have your Chlorinator checked.

Warning: Some people recommend that you put salt directly in the skimmer box. This is a very bad practice as it allows very high concentrations of salt to be passed through your filtration and other pool equipment.

4.0 Chlorinator Maintenance and Troubleshooting

If the supply cord is damaged, it must be replaced by Hurlcon or its service agent or a similarly qualified person in order to avoid a hazard.

4.1 Cell Maintenance

Your VX Chlorinator has an automatic cleaning feature that under normal conditions, will keep the cell plates clear of deposits of salt and calcium.

VX Series cells have a negative charge sensor that monitors the flow and salt levels of the water. This sensor is designed to be fail safe. As it is negative charges deposits of calcium or other debris may be deposited on it and cause it to indicate a low salt or no flow condition. Should a low salt condition be indicated, have your salt level checked at your local pool shop. If the low salt condition persists, or a no flow condition is indicated when the supply pump is operating, you may need to manually clean your chlorinator Cell.

If the cell does need to be cleaned, carefully follow the steps below:

- close applicable valves
- disconnect the Chlorinator from the Mains by removing the 3 pin plug
- disconnect the cell wires
- undo the barrel nuts connecting the cell to your filtration system.
- turn the cell upside down (inlet and outlet on top) and fill the cell with a mix of 1 part Hydrochloric acid to 10 parts water and leave standing for a few minutes. As an alternative, you may use an approved commercial Cell cleaning solution
- repeat if necessary and then rinse well in clean water
- re-install the cell ensuring o-rings are correctly located and barrel nuts are tightened to prevent leaks
- re-connect cell wires with wing nuts supplied making sure the blue wire is connected to the blue terminal. Incorrect connection may damage your chlorinator control. Tighten wing-nuts to ensure the electrical connection is sound.
- Return all valves to their normal positions, re connect power to the Chlorinator and turn on at power point.

WARNING: Follow safety instructions provided with the Hydrochloric acid or cleaning solution. When handling Hydrochloric Acid, the use of eye protection, mask and gloves are highly recommended. Extreme caution should be taken whenever handling Hydrochloric Acid or Cell Cleaning Solution.

4.2 Troubleshooting

Your VX Chlorinator has diagnostic and safety features to make it easy to maintain your system. The table below summarises potential faults and their causes.

Fault Indication	Potential Cause	Remedy
No Flow	Pump turned off/disconnected or valves closed	Ensure valves/pump on
	Blue wire disconnected from cell	Connect Blue sense wire to cell
Low salt	Salt level in pool has dropped too low	See section 3.5 above
	Pool water temperature is low	See section 3.5 above
	Cell has calcified	See section 4.1
	Cell has failed	Call a technician
Display blank	No Power to Controller	Plug in controller and ensure mains power available
	Fuse blown	Replace fuse (3 amp slow blow)
Low/No chlorine production	Cables not connected to cell	Connect cables
	Timer period too short	Increase timer period
	Chlorine output level too low	Increase chlorine output
	Filter needs backwashing	Backwash filter
	Ph too high	Get pH level correct
	Pool stabiliser too low	Get Stabiliser between 30 and 60 ppm
	Salt level too low	Increase salt to above 4000ppm
Clock loses time when mains power removed	Battery life expired	Call a technician

5.0 Warranty

WARRANTY

Your VX Series Chlorinator is covered by a limited 5 year warranty. The Electrolytic Cell is covered by a full 5 years warranty against defects in materials and assembly from the date of purchase plus 30 days to allow for installation. The PowerPack and Controller is covered by a 5 year pro rata warranty from the date of purchase plus 30 days to allow for installation. The pro rata warranty component means 100% of any parts and labour costs will be covered in the first year, 80% of cost in the second year, 60% in the third year, 40% in the fourth year and 20% of the cost in the fifth year.

In field labour is limited to capital city metropolitan areas and within a 20 km radius of an authorised Hurlcon service agent. For installations outside of these areas, a small travelling charge may apply. Hurlcon reserves the right to replace or repair defective parts at its option.

Should a fault occur, call Hurlcon or an Authorised Hurlcon Service Agent. There are no user serviceable parts. Always turn off and disconnect power supply when removing Chlorinator control or disconnecting the Cell. No representations may be made on Hurlcon's behalf by any person unless permission, in writing is obtained from Hurlcon.

Limitations

All warranties only apply if the equipment is installed and operated in complete compliance with the installation and operating instructions.

Specific limitations and exclusions include but are not limited to, water ingress into Chlorinator control.

Hurlcon assumes no liability for consequential damages of any kind. In field labour warranty is applicable in capital city metropolitan areas and within a 20 km radius of Hurlcon Authorised Service Agents. Should you request a warranty service call and the problem is diagnosed as non-warrantable, you will be charged for a diagnostic service call plus any parts and labour required to repair the Chlorinator. No person is authorised to make any representations on behalf of Hurlcon.

Commercial Installation

On Commercial Installations, such as health clubs, motels/hotels and hydrotherapy facilities, parts and in field labour warranty (in capital city metropolitan areas and within a 20 km radius of Hurlcon Authorised Service Agents) is 12 months from the date of purchase plus 30 days to allow for installation.

Hurlcon Pty. Limited

Melbourne:	Sydney:	Brisbane:	Gold Coast	Adelaide:	Perth:
Ph: (03) 9765 9700	Ph: (02) 9853 2100	Ph: (07) 3308 5400	Ph: (07) 5552 2600	Ph: (08) 8349 2500	Ph: (08) 9350 2600
Fax: (03) 9765 9770	Fax: (02) 9853 2170	Fax: (07) 3309 5470	Fax: (07) 5552 2670	Fax: (08) 8349 2500	Fax: (08) 9350 2670

Website: www.hurlcon.com.au

Email: service@hurlcon.com.au